



## Bateria foto litowa Duracell CR-V3 3V 1 szt.

Cena: 31.86 zł

[Bateria foto litowa Duracell CR-V3 3V](#)

**Kod produktu: 021320**

**Producent: Duracell**

Bateria foto litowa 3V Duracell CR-V3.

Najwyżej jakości, NAJMOCNIEJSZA (lithium) bateria dedykowany do aparatów fotograficznych, przeważnie firmy Kodak (patrz lista kompatybilności) firmy DURACELL.

**Umożliwia zrobienie aparatem cyfrowym od 300 do 650 zdjęć.** Trwa i stabilna nawet w niskich temperaturach.

### **Specyfikacja:**

Pojemność: 3300mAh

Napięcie: 3V

Typ: litowa

Wymiary [mm] [dł x szer x wys.]: 52 x 28,60 x 14,60

Waga [g]: 39

Temperatura pracy: -20°C do +60°C

**Jednostka miary: sztuka**

**Inne oznaczenia:** CRV3, CR-V3P, DLCRV3B, ELCRV3, KCRV3, LB01, LB-01, RLCRV3-1, SBP-1103.

**Zastosowanie:** aparaty, lampy błyskowe oraz inne sprzęty.

**Pasuje do aparatów:**

**BENQ:** DC4500,

**CANON:** E-20, Powershot A300, Powershot A60, Powershot A70, Powershot A75,

**CASIO:**

GV20, QV-2000UX, QV2100, QV-2300UX, QV-2400UX, QV-2800UX, QV-2900UX, QV-3000EX, QV-3000EX/Ir, QV-3000UX, QV-3500EX, QV-4000, QV8000SX, QV-Ir, QV3, XV3,

**KODAK:**

EasyShare C300, EasyShare C310, EasyShare C315, EasyShare C330, EasyShare C340, EasyShare C360, EasyShare C433, EasyShare C433 Zoom, EasyShare C503, EasyShare C530, EasyShare C533, EasyShare C533 Zoom, EasyShare C603, EasyShare C613, EasyShare C623 Zoom, EasyShare C633, EasyShare C643, EasyShare C643 Zoom, EasyShare C653 Zoom, EasyShare C663, EasyShare C663 Zoom, EasyShare C703, EasyShare C743, EasyShare C743 Zoom, EasyShare C875, EasyShare C875 Zoom, EasyShare CD33, EasyShare CD40, EasyShare CD43, EasyShare CD50, EasyShare CW330, EasyShare CX4200, EasyShare CX4210, EasyShare CX4230, EasyShare CX4300, EasyShare CX4310, EasyShare CX6200, EasyShare CX6230, EasyShare CX6330, EasyShare CX6445, EasyShare CX7220, EasyShare CX7300, EasyShare CX7310, EasyShare CX7330, EasyShare CX7430, EasyShare CX7525, EasyShare CX7530, EasyShare DX3215, EasyShare DX3500, EasyShare DX3600, EasyShare DX3700, EasyShare DX3900, EasyShare DX4330, EasyShare DX4530, EasyShare DX4900, EasyShare DX6340, EasyShare DX6440, EasyShare Z1275 Zoom, EasyShare Z612, EasyShare Z650, EasyShare Z650 Zoom, EasyShare Z663 Zoom, EasyShare Z700, EasyShare Z710, EasyShare Z740, EasyShare Z740, EasyShare Z885, EasyShare ZD710 Zoom,

**KONICA:**

Digital Revio KD-200Z, Digital Revio KD-210Z, Digital Revio KD-220Z, DIMAGE G100,

**KYOCERA:**

Finecam L3, Finecam L30, Finecam L3v, Finecam L4, Finecam L4v,

**MINOLTA:**

Dimage E203, Dimage E223, Dimage E323, Dimage F100, Dimage F200, Dimage F300,

**NIKON:**

Coolpix 2100, COOLPIX 2100, Coolpix 2200, Coolpix 3100, COOLPIX 3100, Coolpix 3200, COOLPIX 3200, Coolpix 4100, Coolpix 600,

**OLYMPUS:**

C-1, C-100, C-120, C-150, C-160, C-170, C-180, C-1Z, C-1 Zoom, C-2, C-200 Zoom, C-2040Z, C-2040 Zoom, C-21, C-2100 Ultra Zoom, C-211 Zoom, C-21T.commu, C-220 Zoom, C-2 Zoom, C-3000, C3000D-565 Zoom, C-3000 Zoom, C-300 Zoom, C-3020 Zoom, C-3030 Zoom, C-3040, C-3040Z, C-3040 Zoom, C-3100 Zoom, C-310 Zoom, C-350 Zoom, C-360 Zoom, C-370 Zoom, C-4000 Zoom, C-4040 Zoom, C-40Z, C-40 Zoom, C-4100Z, C-4100 Zoom, C-450 Zoom, C-460 Zoom, C-460 Zoom del Sol, C-480 Zoom, C-500 Zoom, C-5050Z, C-5050 Zoom, C-5060 Wide Zoom, C-5500 Sport Zoom, C-55 Sport Zoom, C-55 Zoom, C-700 Ultra Zoom, C-700UZ, C-720 Ultra Zoom, C-720UZ, C-725 Ultra Zoom, C-730, C-730 Ultra Zoom, C-730UZ, C740, C-740 Ultra Zoom, C-740UZ, C-745 Ultra Zoom, C-745UZ, C750, C-750 Ultra Zoom, C-750UZ, C-755 Ultra Zoom, C-755UZ, C-8080 Wide Zoom, C-960 Zoom, C-990 Zoom, C-990 ZS, Camedia C-180, Camedia D-435, D-100, D-150, D-150/C-1, D-150 Zoom, D-230, D-370, D-380, D390, D-395, D-40 Zoom, D-425, D-435, D-460 Zoom, D-490 Zoom, D-510, D-510 Zoom, D-520 Zoom, D530, D-540 Zoom, D-545 Zoom, D-550 Zoom, D560, D-560 Zoom, D-565

Zoom, D-575 Zoom, D-580 Zoom, D-595 Zoom, E-1, E-10, E-100RS,  
E-20, E-20N, E-20P, FE-100, FE-110, FE-120, SP-310, SP-320,  
SP-350, SP-500, SP-500UZ, X-200, X-250, X-350, X-550,

**PENTAX:**

Digibino DB100, Digibino DB200, \*ist D, \*ist DL, \*ist DL2, \*ist DS, \*ist  
DS2, K100D, K100D Super, K110D, Optio 230, OPTIO30, OPTIO330,  
Optio 330GS, Optio 33L, Optio 33LF, Optio 33WR, OPTIO430,  
OPTIO43WR, Optio S30, OPTIO S40, Optio S45, Optio S50, Optio  
S55, Optio S60,

**POLAROID:** PDC-1050,

**PRAKTYKA:**

DC 2.1S, DCZ 1.3S, DCZ 2.2S, DCZ 2.2V, DCZ 3.2S, DCZ 3.4, DCZ  
4.1, DCZ 4.2, DCZ 5.1, EXAKTA DC 3300,

**RICOH:** Caplio RR330,

**ROLLEI:** Prego da3, Prego da4, Prego da5, Prego da6,

**SAMSUNG:**

DigiMax 101, DigiMax 130, DigiMax 200, DigiMax 202, DigiMax 210SE,  
DigiMax 220SE, DigiMax 230, DigiMax 240, DigiMax 250, DigiMax 300,  
DigiMax 301, DigiMax 340, DigiMax 350SE, DigiMax 35MP3, Digimax  
360, Digimax 370, Digimax 401, Digimax 410, Digimax 420, Digimax  
430, Digimax 50Duo, Digimax 530, Digimax A4, Digimax A40, Digimax  
A400, Digimax A402, Digimax A5, Digimax A50, Digimax A502,  
Digimax A503, Digimax A55W, Digimax A6, Digimax A7, DigiMax V3,  
DigiMax V4, Digimax V40, Digimax V4000, Digimax V5, Digimax V50,  
Digimax V6, Digimax V70, GX-1, GX-1L, GX-1S,

**SANYO:**

DSC-R1, DSC-S3, DSC-S4, VPC-R1, VPC-R1EX, Xacti DSC-S1, Xacti  
DSC-S3, Xacti DSC-S4, Xacti DSC-S5, Xacti VPC-R1, Xacti VPC-R1E,  
Xacti VPC-R1EX, Xacti VPC-S1, Xacti VPC-S3, Xacti VPC-S4, Xacti  
VPC-S5, Xacti VPC-S5 BK, Xacti VPC-S6,

**SIGMA:** SD10, SD9,

**TOSHIBA:** Allegretto M700, PDR-M500, PDR-M700, PDR-T10,

**YASHICA:** EZ 4030.

[UWAGA: Zasady bezpiecznego użytkowania baterii litowych](#)

## Szczegóły

Napięcie 3,0V